


EZE•Swap Cubicle Curtain Snap Panel System

Installation Instructions

Please read all instructions before assembling panel system.

1. Attach mesh to cubicle track carriers.
2. Snap curtain panels onto mesh from each end.
3. Overlap curtain panels at desired width for complete privacy then snap to the end of panel.
4. Disposable fabrics only - add velcro disc as noted below.

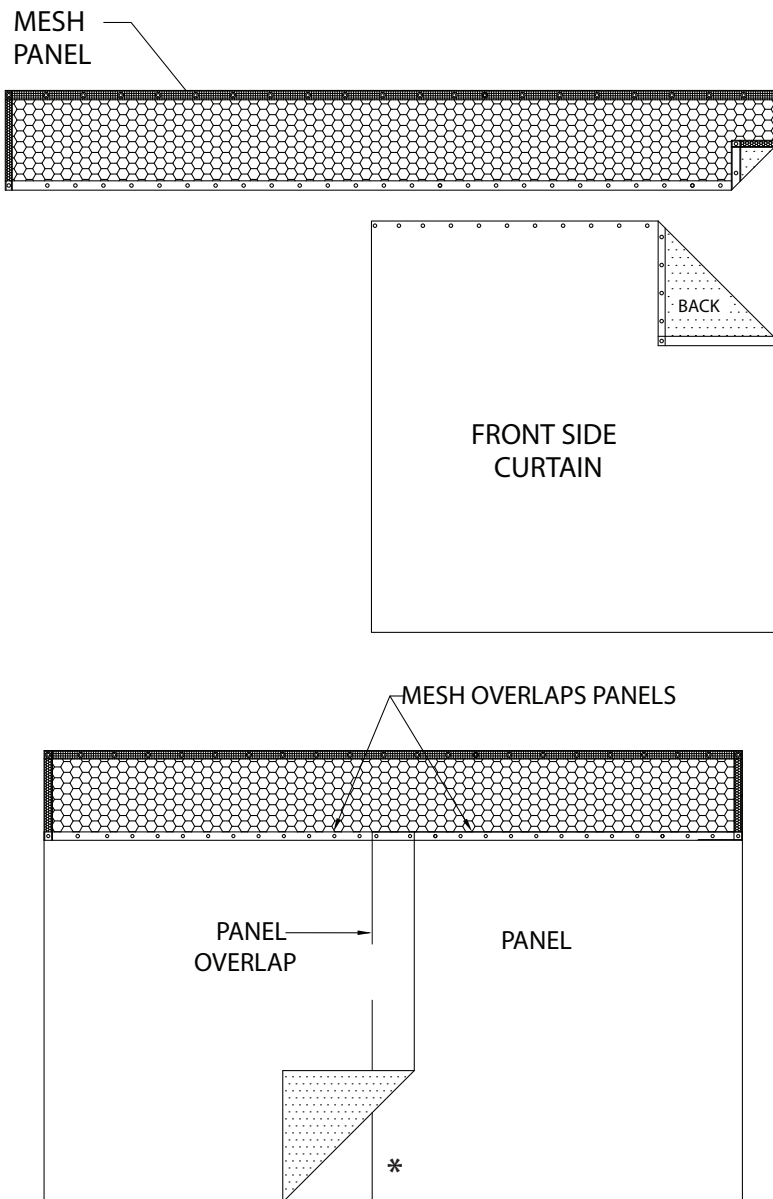

* Disposable Panels Only -
Place included adhesive velcro disc
here for added privacy when using
disposable fabric panels only.

IPC.621Rev.2

CLICKEZE® Privacy Systems

inpro.com • 800.222.5556 • 262.679.9010

World Headquarters S80 W18766 Apollo Drive, Muskego, WI 53150 USA

Installation Hotline: 866.394.6776

inpro®